
Use and Maintenance - SC1500

ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual



1. Check the battery charge gauge (and 2. Fill-in the tank with clean water. if necessary re-charge)

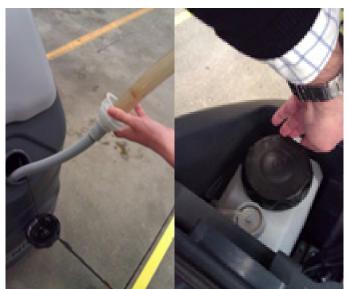

Check if the Ecoflex bottle is well installed (only for machine with Ecoflex)




3. Check the vacuum hose is connected to the squeegee



4. Check the brush is clean



5. Install the brush on the deck

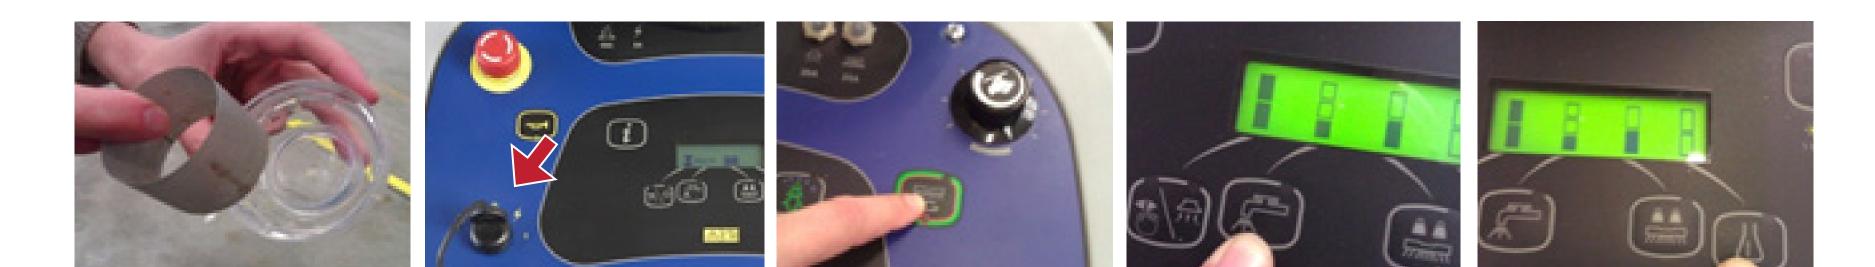



7. Stand on the machine and turn on the key (squeegee lowers automatically)

8. Press the One-Touch button

9. Adjust to the desired water flow

10. Adjust to the desired chemical concentration



11. Select double pressure if needed



12. Select silent mode if needed



13. Press the forward pedal, select the direction and start operating the machine



14. Open the crew cap and empty the recovery tank with the squeezable hose



15. If necessary, empty the solution tank through the solution valve and clean the filter net





16. Remove and clean the debris tray

17. Wash the recovery tank with clean water





the blades' wear status



19. Take the squeegee off and check 20. Clean the machine using a damp cloth and park it with the recovery tank open

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

18. Remove debris from the brushes

PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS

Nilfisk A/S Kornmarksvej 1 DK-2605 Brøndby Denmark

Tel.: +45 43 23 40 50 Fax: +45 43 43 77 00 mail.com@nilfisk.com

www.nilfisk.com



Troubleshooting - SC1500

ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual

The machine doesn't work as it should?



1 Check if the power cable is correctly connected

X 0022.82 1000

2 Check the battery charge gauge (and if necessary re-charge)



- **1** Check the vacuum hose is connected to the squeegee
- **2** Open the recovery tank **3** Check if squeegee blades and check if the gasket and

vacuum grid are cleaned

are damaged or dirty

4 Close the recovery tank

gasket wear

properly and/or verify the

5 Check to have suction button activated

The machine doesn't clean as it should?



1 Check to have solution into the tank



2 Check if you have the right water setting



3 Check if the filter is cleaned

The brush don't work as they should?



- **1** Check if the brush is correctly installed and not worn out
- 2 Check the brush is cleaned
- **3** Check if there are external materials avoiding brush rotating

Nilfisk A/S
Kornmarksvej 1
DK-2605 Brøndby
Denmark

Tel.: +45 43 23 40 50 Fax: +45 43 43 77 00 mail.com@nilfisk.com www.nilfisk.com